

Samz Design – Product Care Instructions & Maintenance Guide

Indoor Wooden Products

Care Instructions:

- Clean with a soft dry or slightly damp cloth.
- Avoid direct sunlight exposure.
- Keep away from water and high humidity.
- Use table mats and coasters.

Maintenance:

- Light polishing: every 3–6 months
- Resanding & recoating: every 18–24 months
- Under direct sunlight: 12–18 months

Outdoor Wooden Products

Care Instructions:

- Clean regularly with mild soap and water.
- Avoid standing water.
- Use furniture covers when not in use.
- Keep under shade if possible.

Maintenance:

- Cleaning: every 1–2 months
- Recoat oil/sealer: every 6–12 months
- Resanding: every 12–18 months
- Under heavy rain & sun: every 6–9 months

Powder Coated Metal

Care Instructions:

- Clean with soft cloth and mild detergent.
- Avoid scratching the coating.
- Keep dry when possible.

Maintenance:

- Cleaning: every 2–3 months
- Recoating if damaged: every 3–5 years

Powder Coated Aluminium

Care Instructions:

- Clean with water and soft cloth.
- Avoid harsh chemicals.

Maintenance:

- Cleaning: every 2–3 months
- Recoating: every 4–6 years

Stainless Steel 304

Care Instructions:

- Clean with mild soap and water.
- Wipe dry after cleaning.
- Avoid salt residue.

Maintenance:

- Cleaning: every 2 months
- Polishing: every 6–12 months

Sunproof & Sunbrella Cushions

Care Instructions:

- Remove covers and wash with mild detergent.
- Allow cushions to dry completely.
- Store indoors during heavy rain.

Maintenance:

- Cleaning: every 1–2 months
- Cushion cover replacement: every 3–5 years
- Under strong sunlight: every 2–3 years

PE Rattan / Viro Wicker

Care Instructions:

- Wash with water and soft brush.
- Avoid sharp objects.
- Keep under shade if possible.

Maintenance:

- Cleaning: every 2 months
- Replacement lifespan: 4–6 years
- Under strong sunlight: 3–4 years

Natural Rattan

Care Instructions:

- Keep indoors or under cover.

- Avoid rain exposure.
- Dust regularly.

Maintenance:

- Cleaning: monthly
- Recoating varnish: every 12–18 months
- Outdoor lifespan: 1–2 years only

Olefin Rope

Care Instructions:

- Clean with mild soap and water.
- Avoid sharp objects.

Maintenance:

- Cleaning: every 2–3 months
- Replacement: 4–5 years
- Under strong sunlight: 3–4 years

Parasols (Umbrellas)

Care Instructions:

- Always close parasol during strong wind.
- Close during heavy rain.
- Dry before storage.
- Use protective cover.

Maintenance:

- Cleaning: every 2 months
- Fabric replacement: every 3–5 years
- Frame check: every 12 months